


Air Decay Leak Tester

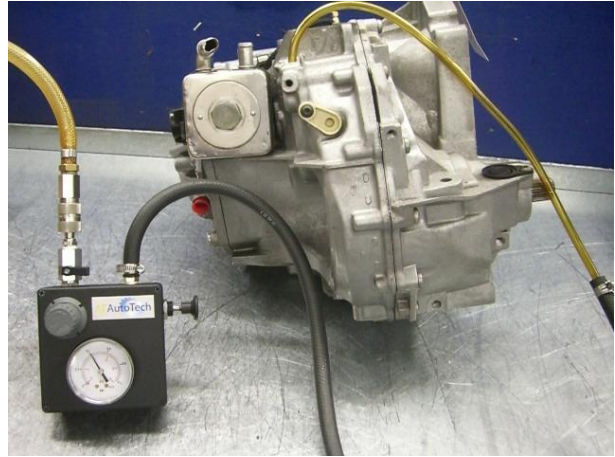

Stop those irritating and costly external leaks before your unit is fitted into the car by using a simple method of “Air decay”.

Simply feed a regulated air supply to the transmission and torque converter normally via the breather. Seal all open areas using either the original part or alternatively a suitable bung. When the unit is full of air close off the tap and wait to see if the gauge decreases.



Even the smallest of leaks show up very quickly.